

## HOW TO REMOVE THE PROGUN ADAPTER FROM THE HOSE

- The adapter is twisted to the left to loosen, and pulled from the hose end.  
(if adapter opening is facing forward/up as this image shows)



- Twist to loosen as you pull.
- Hold the adapter firmly below the two bezels of the Quick connection attachment.
- Hold the hose hard plastic end piece firmly with the other hand. (do not grip or pull the hose)

If needed you may also apply some soapy water, or liquid soap to help loosen the adapter from the hose.

They can sometimes become very tight with use. And may not be able to be easily removed.